







## Crimping with Regular Crimping Pliers


**Step 1:** String a crimp tube and a clasp onto the wire. String the wire back through the crimp tube. Straighten the wires inside the crimp tube so that they lie side by side.

**Step 2:** Using the "crimper," gently compress the crimp tube, creating a divot.

**Step 3:** Using the "rounder," gently compress the crimp tube. Turn and repeat 3 times until it creates a round shape and equalizes the pressure. Cut off the excess wire at the base of the crimp.

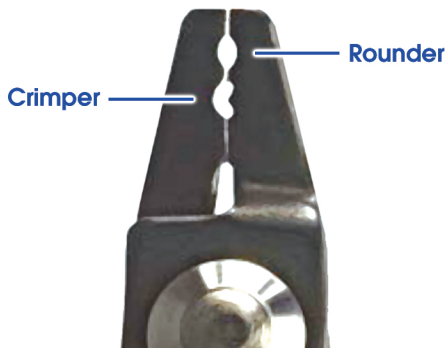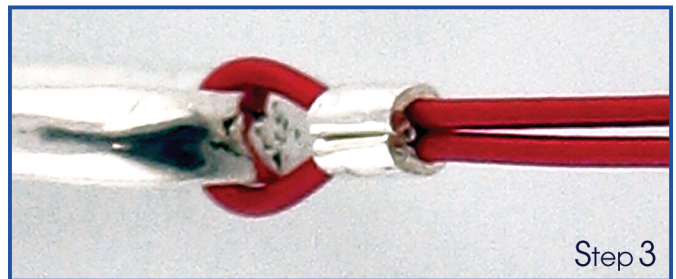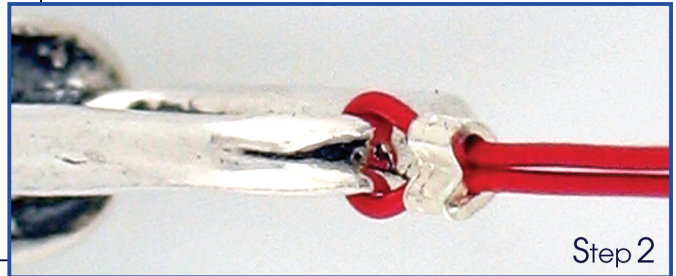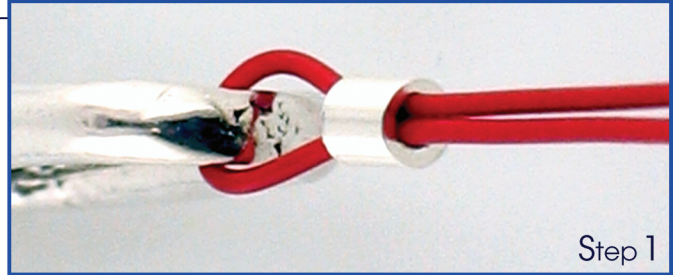

## Tying an 8-Knot with Soft Flex® Beading Wire

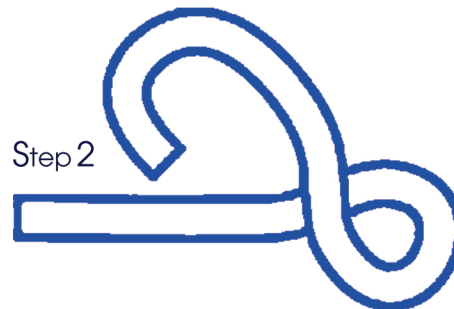

## Defining Excellence Then and Now

We lead our industry with simply the best products and services. We celebrate our innovative ideas and proudly inspire creativity with our passion to educate. We are dedicated to exceeding the expectations of our customers and are grateful for their continued loyalty.

